



# Quick Start Guide

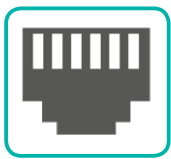


## AvediaPlayer m9405 Media Player

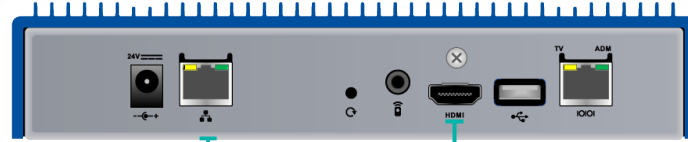

**2** Connect the media player to the network using a network cable. (If you don't have Power over Ethernet, use a network cable and the Exterity avply-psu-## external power adaptor.) Details of the media player, including its MAC & IP addresses, appear on the attached display after a couple of minutes.



**3** (Optional) Using the AvediaServer AvediaCare app, use the search bar to locate the media player using its MAC or IP address. Click the pencil icon to **change its name and location** to make it easier to find.

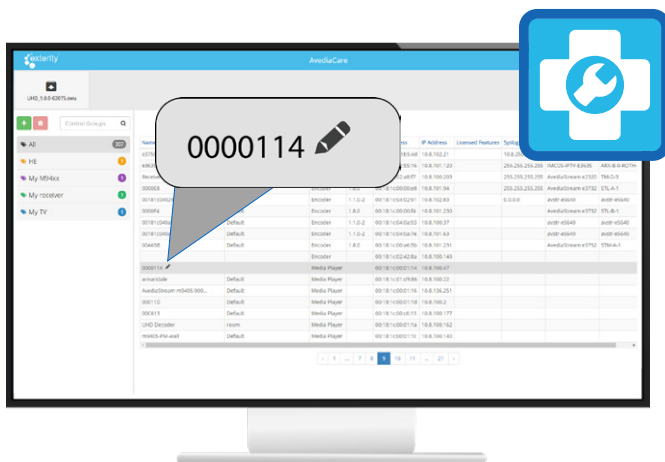

**1** Connect the media player to a display using a "High Speed" or "Certified Premium" HDMI cable.



Display



**4** Click the Exterity logo in the top left, then open the Smart Control app. In the top left, click the ArtioSign icon. The m9405 appears in the list of signage devices. **Drag the required playlist or campaign onto the media player to view it on the attached display.**

